



DealerNation@aol.com



The "Must Have" Manual of
OUTDOOR POWER EQUIPMENT
BOOK 3 - GARDEN TRACTORS



Technical Service Information for the MTD Product Line



MTD Product Training and Education

MTD SERVICE LLC Product Training and Education Department

TABLE OF CONTENTS

| | |
|--|------------------|
| WORK SAFETY—FOLLOW THESE RULES | Section 1 |
| GENERAL INFORMATION AND SAFETY PRECAUTIONS | Section 2 |
| Batteries and Charging Systems | 2-2 |
| SAFETY INTERLOCK SYSTEMS | Section 3 |
| General | 3-1 |
| 600 Series Rider Only | 3-1 |
| Electric Start System | 3-3 |
| Troubleshooting Safety Interlock Systems | 3-15 |
| Evaluating Electric Clutches | 3-25 |
| Process of Elimination | 3-43 |
| Resistance | 3-43 |
| Magneto Ignition | 3-43 |
| Grounding | 3-43 |
| Use of Test Instruments in Circuit Repair | 3-43 |
| Burnishing Procedure for Electric Clutch/Brake | 3-45 |
| BELTS AND DRIVE SYSTEMS | Section 4 |
| General | 4-1 |
| Proper Storage of V-Belts | 4-3 |
| Causes of V-Belt Problems | 4-3 |
| V-Belt Problems with Rotary Tillers, Self-Propelled Mowers and Riding Mowers | 4-4 |
| Pulley Alignment | 4-5 |
| Idlers | 4-6 |
| Transmatic Lawn Tractors 600 and 700 Series | 4-15 |
| Transmatic Tractors 800 Series | 4-27 |
| Models 600 & 800 Series Tractors Drag Link Installation | 4-30 |
| Gear Drive 800 Series | 4-35 |
| Hydrostatic Drive 800 Series | 4-36 |
| Hydrostatic Drive 900 Series | 4-43 |
| Rider and Tractor Frame Identification | 4-45 |
| TRANSAXLES | Section 5 |
| Disassembly of Heavy Duty Single Speed Transaxle, Model No. 618-0003 | 5-2 |
| MTD 2 Speed Transmission Theory of Operation | 5-7 |
| Two Speed Transaxle 1996 and Prior | 5-10 |
| Disassembly of 4-Wheel Steer Transaxle, Model No. 717-1287 | 5-20 |
| Servicing the 618-0229 MTD 2 Speed Transaxle | 5-21 |
| Hydrostatic Transaxle | 5-30 |
| HYDROSTATIC TRANSMISSIONS | Section 6 |
| General | 6-1 |
| Model 7 Hydrostatic Transmission | 6-2 |
| BDU-105 Hydrostatic Transmission | 6-6 |
| Model 310-0500/0750 Intergrated Hydrostatic Transmission | 6-25 |
| Model 11 Hydrostatic Transmission | 6-26 |
| 800 Series Hydrostatic Removal & Installation | 6-48 |
| 900 SERIES | Section 7 |

1

2

3

4

5

6

Hydrostatic Transmission Control Adjustment7-2
Hydraulic Lift Valve Adjustment7-4
Power Take Off (PTO) Adjustment7-5
PTO Belt Removal7-5
Rear Wheel Track Adjustment7-5
Undercarriage Locks7-6
Drive Shaft Removal7-6
Three Point Hitch Assembly7-7
Leveling the Deck (Optional Equipment)7-8

CUTTING DECKS Section 8

Model 931 44-inch Rear Discharge Mowing Deck8-6
Model 806, 846, and Series 800 "H" 46-inch Side Discharge Mowing Deck8-15
Model Series 800 "P" 50-inch Side Discharge Deck8-20
50-inch Side Discharge Deck for 900 Series Garden Tractor8-24
Model 824 Electric Sleeve Hitch8-27
30-inch Hydraulic Tiller Attachment8-31
Hydraulic Tiller Component Replacement8-39
46" Dozer Blade8-51

GLOSSARY