



DealerNation@aol.com



The "Must Have" Manual of
OUTDOOR POWER EQUIPMENT
BOOK 2 - REAR ENGINE RIDERS & LAWN TRACTORS



Technical Service Information for the MTD Product Line



MTD Product Training and Education

MTD SERVICE LLC Product Training and Education Department

TABLE OF CONTENTS

WORK SAFETY	Section 1
GENERAL INFORMATION	Section 2
Safety Precautions	2-1
Batteries And Charging Systems	2-2
ELECTRICAL	Section 3
Safety Interlock Systems	3-1
Safety Interlock Systems - Changes for 1991	3-1
Electric Start System	3-3
Recoil Start System	3-6
Safety Interlock Systems Wiring Diagrams	3-10
Troubleshooting Safety Interlock Systems	3-23
Evaluating Electric Clutches	3-56
BELTS AND DRIVE SYSTEM	Section 4
General	4-1
Proper Storage of Belts	4-3
Causes of V-Belt Problems	4-3
V-Belt Problems with Rotary Tillers, Self-Propelled Mowers and Riding Mowers	4-4
Belt Wear Due to Normal Life	4-5
Pulley Alignment	4-6
Idlers	4-6
Maintenance Of Variable Speed Pulleys	4-9
Four Wheel Steering	4-10
Disassembly Of Four Wheel Steering	4-13
Brake Adjustment for 600 and 700 Series	4-15
HYDROSTATIC	Section 5
TRANSAXLES	Section 6
General	6-1
Transaxle Changes For 1990, 1991, 1992 and 1997 Models	6-3
Disassembly/Assembly of Transaxle	6-5
Hydrostatic Transaxle	6-13
Integrated Hydrostatic Transaxle	6-17
LAWN TRACTORS	Section 7
300 and 400 Series	7-1
Rear Engine Riding Mowers 500 Series	7-6
Transmatic LT 600A	7-9
Hydrostatic Drive 700 Series	7-35
YARD BUG	Section 8
Deck Leveling	8-1
Brake Adjustment	8-3
Blade Brake/PTO Adjustment	8-5
Speed Control Pedal Adjustment	8-6
Steering Adjustment	8-9
Removal and Installation of Deck Belt	8-11
Removal and Installation of Mowing Deck Assembly	8-12
Removal and Replacement of the Drive Belts	8-14
Transmission Removal and Installation	8-16
Transmission Disassembly	8-18
Transmission Reassembly	8-20
Electrical	8-23

1**2****3****4****5****6****7****8**

AUTO DRIVE	Section 9
Leveling the Cutting Deck	9-1
Deck Belt Removal and Installation	9-3
Cutting Deck Removal	9-4
Brake Adjustments	9-5
Autodrive Pedal Adjustment	9-5
Drive Belt Removal and Reinstallation	9-6
Transmission Removal and Installation	9-9
Transmission Disassembly and Reassembly	9-11
Deck Belt Removal	9-14
Hydrostatic Transmission Removal	9-16
Steering Adjustments	9-20
Electrical	9-21
Autodrive/Autocruise	9-30
 MTD Z SERIES	 Section 10
Transmission	10-1
Neutral/Steering Adjustment	10-1
Removal of ZTT Transmission	10-8
Transmission Disassembly	10-13
 ZERO TURN TRACTORS	 Section 11
624 Zero Turn Tractor - The Revolution	11-1
46" Cutting Deck	11-2
Cutting Deck Removal	11-2
Lower Deck Belt Removal	11-3
Servicing the IZT Drive Belt	11-3
Servicing the IZT	11-7
Adjustments to the IZT	11-9
Parking Brake	11-10
Under Dash Service Points ¹	11-11
Dash Panel Removal	11-12
Front Axle	11-16
 ATTACHMENTS	 Section 12
Cutting Decks	12-3
Improvements	12-22
Grass Collectors	12-37
Front Bumper	12-39
Trapac	12-39
42" Dozer Blade	12-40
 GLOSSARY	